 



MultiWii Version 1pre7 Stick Configuration Mode 2

 
Motor Arm




Motor Arm on TRI

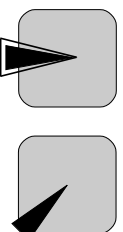


Motor Disarm




Motor Disarm on TRI

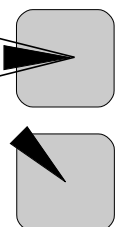


Calibration Acro Gyro

 


Calibration Stable ACC
(disarm Motor first)

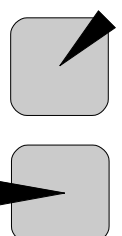


Trim ACC
(move right stick from center
and back for each click – LED
blinks once per click)

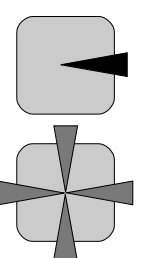


LCD-Config - Enter
(disarm Motor first)

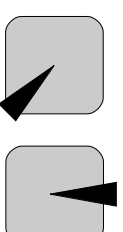


LCD-Config – Select Param

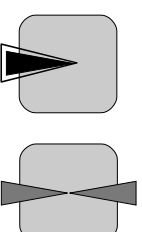

LCD-Config - Change Value

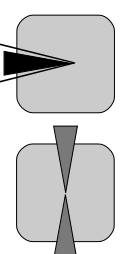

LCD-Config – Save and Exit

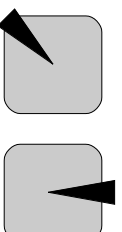

This work is licensed under the
Creative Commons Attribution-NonCommercial-ShareAlike 3.0
Unported License.

To view a copy of this license, visit
<http://creativecommons.org/licenses/by-nc-sa/3.0/> or send a letter to
Creative Commons, 171 Second Street, Suite 300,
San Francisco, California, 94105, USA.